

Digital Camera

The Digital Camera comes equipped with a battery, charger, USB cable, A/V cable, case, and SD card.

1. To power on, press the ON/OFF button.
2. When taking photos, SCENE, P (Programmed Auto), and automatic functions give the camera control over the photo.
3. M, A, S give the photographer manual, aperture-priority, and Shutter-priority control respectively.
4. If inexperienced, we recommend using either SCENE, P, or Automatic functions.
5. When taking video, select the video option denoted by the small camera on a tripod
6. To begin shooting, press the button on the top of the camera.
7. To focus the camera, half press the button before fully pressing.
8. To view shots, press the [PLAY] button.
9. You can delete photos by selecting the trash icon.
10. For additional options, press Menu.
11. To transfer files from the camera, use the USB port on the right side of the camera. Alternatively, you can remove the SD card and use a card reader that can also be borrowed from the CLC Help desk.