

## Video Camera (Stabilizing) Instructions:


Visit the REMOVU K1 website for more information: <https://removu.com/k1-info/>

### List of equipment components:

- Camera [1]
- Micro SD card [2]
- USB power adapter [3]
- USB cable [4]
- Case [5]



## Parts

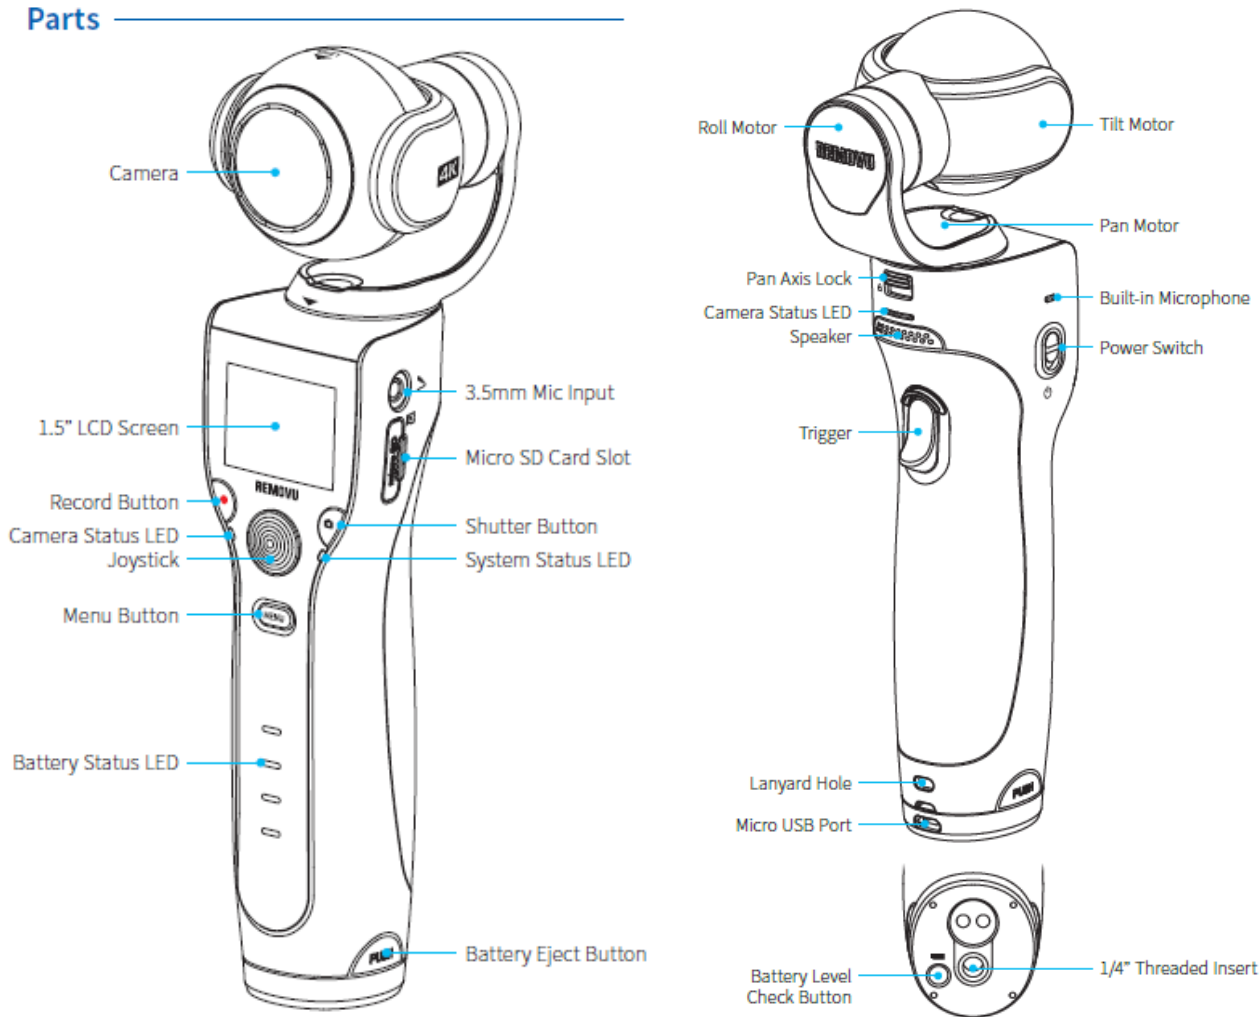

**NOTE: Do NOT lay K1 horizontally while powered on. This may cause malfunction.**

### Charging:

1. Plug one end of the USB cable into the USB Power Adapter and the other end into the Micro USB Port of the camera.
2. The LED indicator turns off when it is fully charged.

### Before use (IMPORTANT – Please follow the steps!):

3. To prevent damaging the gimbal:
  - a. **Unlock** the roll motor by rotating it.
  - b. **Unlock** the pan axis lock by sliding the pan axis lock DOWN.
4. Turn the **power ON** by:
  - a. Sliding down and holding the power switch.
  - b. Releasing the power switch once the device has turned ON.

### During use – Controls:

5. Joystick:
  - a. Use the Joystick to pan or tilt the camera.
6. Trigger:
  - a. Tap the trigger once to switch between pan-mode and follow-mode.
    - i. **Pan-mode:** the camera is vertically stable, can move horizontally
    - ii. **Follow-mode:** the camera follows the direction of movement, both horizontally and vertically
  - b. Tap the trigger twice to re-center the camera to the default position.

- c. Tap the trigger three times to change to/from Selfie mode.
  - d. Hold the trigger and use the Joystick to zoom in/out.
7. Menu:
- a. Use the menu to modify the settings.
  - b. Menu Button: Back
  - c. Joystick or the Shutter Button: Navigate
  - d. Record Button: Select

**After use (IMPORTANT – Please follow the steps!):**

8. **Lock** the pan axis lock by sliding the pan axis lock UP.
9. Turn the **power OFF** by:
  - a. Sliding down and holding the power switch.
  - b. Releasing the power switch once the device has turned OFF.
10. **Lock** the roll motor by rotating it. Ensure that the device is turned OFF before locking the roll motor.