

Voice Recorder

The Olympus Voice Recorder comes equipped with a 2GB SD card, battery, 2 Piece adaptor, USB adaptor, and case.

1. Turn on the voice recorder, and make sure that it is switched to “voice mode”, not “video mode”. The switch is on the right side of the device.
2. Test a recording by pressing the red REC button and press STOP when you are done recording. You may need to press REC more than once for it to start recording. You will notice that the timer will start once recording begins.
3. Once you press STOP, you will see your new recording appear in the folder. Play the file.
4. To transfer files to computer, open the flap at the bottom of the recorder. Plug the mini usb into the port and the usb into your computer.
5. To charge recorder, plug the mini usb into the bottom of the recorder and plug the usb into the battery adaptor.
6. Delete the recording by pressing the ERASE button. Delete all other recordings on the device.